


211992 - Asta rulli centrale Multi Matic 1.400 E=15 con 3 nottolini argento

Disegni tecnici

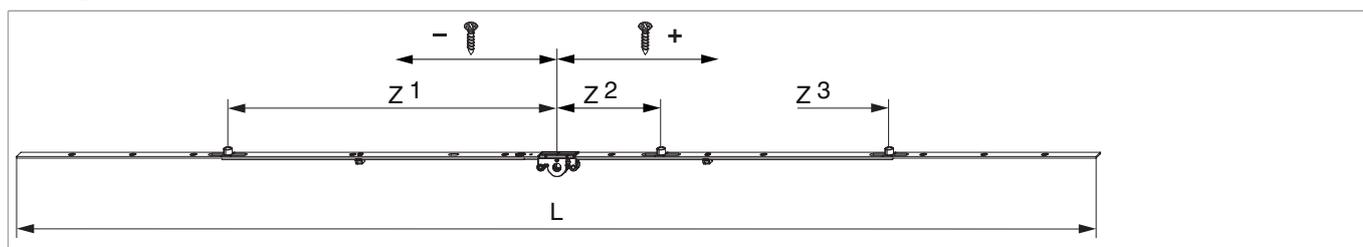

		L				N ^o
argento	1.400	1.420	15	1.001 - 1.400	20	211992

Tabella posizionamento viti

N ^o		1	2	3	4	5	6	7	8	9	10	11	12
211992	10	-640	-560	-480	-270	-70	70	270	480	560	640		


Tabella punti di chiusura

N ^o		Z1	Z2	Z3	Z4	
211992	3	-435	135	435		

Dime

			N ^o
Dima forature per fori martellina MM	per punta 3mm	1	203861
Dima forature per fori martellina MM	per punta D=3 mm e D=12 mm	1	203862


Quote della scatola cremonese

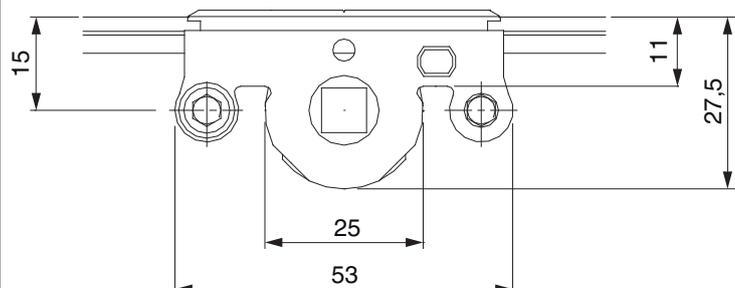


- Larghezza fresata per scatola cremonese \varnothing 12 mm
- Per fissaggio maniglia utilizzare viti SPAX \varnothing 5 mm o viti M5.

Schema di foratura

Per serramenti in legno

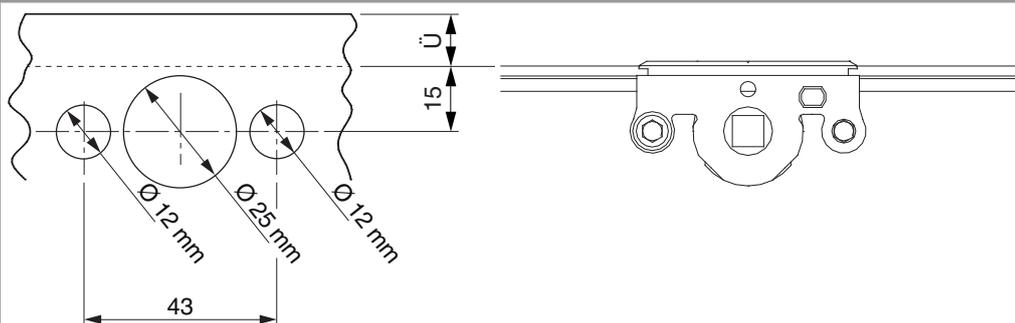

Per serramenti in PVC e alluminio

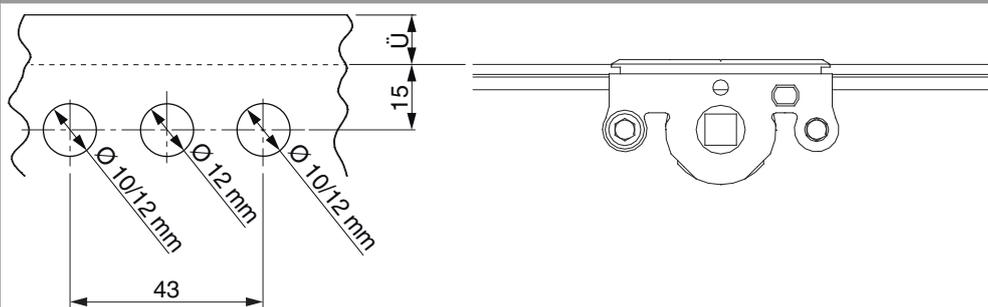

Regolazione pressione

Fungo e nottolino

